



windsor telecom®  
making technology easy and enjoyable



# Router installation guide

FTTC/ADSL Installation


# FTTC/ADSL Installation



BT NTE




Plug the DSL cable into the left port on the BT NTE.

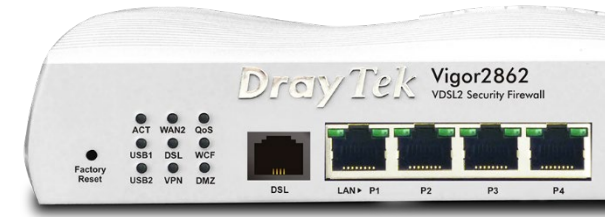

Plug the other end of the DSL cable into the port labelled "DSL" on the router.



For this version of BT NTE, you will need an ADSL filter that goes into the box first, then you will be able to plug in the DSL cable. The rest of installation process is the same.

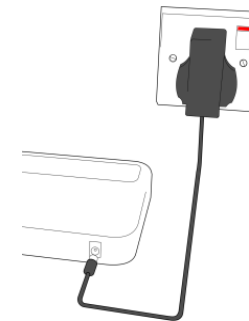

Lastly, plug the router into wall socket and switch it on.

